RUTLAND COUNTY
GARDEN FURNITURE
Hand-Crafted

Assembly Instructions

Normanton/Hambleton /Cottesmore 6ft tool store

Before you commence the assembly process we recommend that you read these instructions thoroughly beforehand to familiarise yourself with the assembly process and to also check that you have the correct components. If for any reason you need assistance, you can find our contact details on the final page of these instructions.

We highly recommend that any assembly is carried out on a flat, level surface if possible and that you use another person to assist you if necessary.

Package contents

2 x End panels
2 x Back panels
2 x Centre posts
1 x Base
1 x Lattice
1 x Roof
38 x Shorter green screws
12 x Longer green screws (For the base only)
2 x Spacer blocks
1 x Door
1x Partition panel
12 x 38mm black screws

Tools required

Electric screwdriver with No2 Pozidrive bit
Or No2 Pozidrive Screwdriver



Normanton/Hambleton/Cottesmore 6ft tool store

Normanton/ Hambleton /Cottesmore 6ft tool store

Step 1



Ensure that you have all of the correct parts as listed on the front page of these instructions, including any fixings.

Step 2



Stand the left hand end panel (or right hand for the reversed roof version) upright on a flat, level surface.

Step 3



Arrange the 2 spacer blocks on the ground, adjacent to the end panel as shown in the photo above. Now place a back panel on the blocks, at 90° to the end panel, aligning the 2 panels ready for fixing.

Step 4



Using the shorter green screws provided, attach the batten on the back panel to the post of the end panel, ensuring that the batten remains vertically aligned to the post.

Step 5



Align one of the longer posts (shorter for a reversed roof) with the other end of the back panel.

Step 6



Attach the panel to the post by screwing through the batten using shorter green screws as before.

Step 7



Rearrange the spacer blocks and offer up the next panel, aligning and attaching it as before.

Step 8




Remove the blocks from beneath the 2nd panel and then slide the base into position as shown, ensuring that the centre post and the central cross member of the base are aligned centrally.

Step 9



Slide the remaining end panel into place as shown above and attach it to back panel as you did with the first end panel.

Step 10

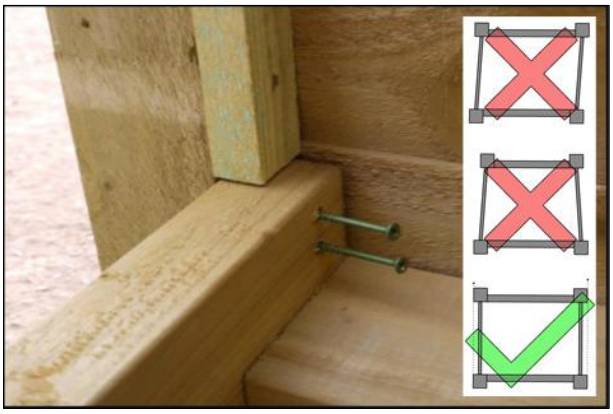

Check that the side panels are parallel with each other and the gap between the outer posts at the front and back of the store are equal. Now attach the base to both side panel's front and rear posts using 2 of the longer green screws in each corner...

Step 11



...and attach the base to the centre rear post.
If you are fitting a kindling shelf, omit steps 12 -14 and attach the front posts before fitting the kindling shelf & lattice and then attaching the roof.

Step 12



Carefully place the roof on top of the log store.

Step 13




Check that the batten ends sit flush with the posts as shown. Now attach the roof to each end panel post with short green screws.

Step 14



Secure the rear of the roof using shorter green screws as shown.

Step 15

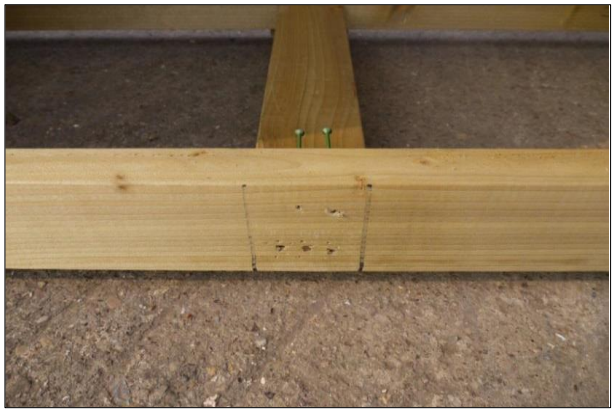

Locate the pencil guide marks on the front face of the base. This is where the centre posts will be fitted.

Step 16



Check the positioning of the post within the guide marks once again before securing the bottom of the centre post with 2 of the longer green screws

Step 17



With the centre post now attached to the base, locate the top of the post between the central roof battens, flush with the batten ends, and secure in place with 2 of the 65mm screws.

Step 18



Establish which side your door is to be fitted on and fit the lattice into place by holding it with the slats in a vertical position, sliding it into the store until you have enough clearance to move it to the horizontal position and then lower it into the base as shown.

Step 19



Place a spacer block at the front of the store adjacent to the front end post and rest the hinge side of the appropriate door on the block, aligning it vertically and horizontally for a good fit. Now use four of the supplied black hinge screws to affix the hinge to the post.

Step 20



Align the top hinge in place, ensuring that the gap between the door and post is consistent at top and bottom.

Step 21



Secure the top hinge in place using more of the black hinge screws. Repeat steps 19 - 21 for any further doors as required.

Step 22



Next affix the partition panel to the centre posts of the store….

Step 23



…by standing it in position and using the 65mm screws, fix it to the rear post. The dividing panel needs to be a tight fit but if *too* snug then release the front centre post at the roof point...

Step 24



...then pull the post forward slightly to allow room to slot the panel into place, now reposition the post and fix again at the roof. Now screw the dividing panel to the front post.

Step 21



The tool store section of the store is now complete and ready for the final stage.

Step 22



The hasp is already screwed onto the front of the door. Close the door and hold the hasp horizontal, then position the staple and fix into place.

Step 23



Your Normanton/Hambleton/Cottesmore log and tool store is now complete.

Step 24

We hope that you found your product quick and easy to assemble but if not and you require any further assistance or have any questions you can contact us by telephone on: **01778 440803**
Email: info@rutlandcountygardenfurniture.co.uk
www.rutlandcountygardenfurniture.co.uk